

| Reference | Type | Technical reference | Packing | Price |
|-----------------|------------------|---------------------|---------------|-------|
| Sony 301/386-0% | Button Batteries | SR43 | 1/10/100/500 | 0.00€ |
| Sony 303/357-0% | Button Batteries | SR44 | 1/10/100/500 | 0.00€ |
| Sony 315-0% | Button Batteries | SR716SW | 1/10/100/1000 | 0.00€ |
| Sony 317-0% | Button Batteries | SR516SW | 1/10/100/1000 | 0.00€ |
| Sony 319-0% | Button Batteries | SR527SW | 1/10/100/1000 | 0.00€ |
| Sony 321-0% | Button Batteries | SR616SW | 1/10/100/1000 | 0.00€ |
| Sony 329-0% | Button Batteries | SR731SW | 1/10/100/500 | 0.00€ |
| Sony 335-0% | Button Batteries | SR512SW | 1/10/100/1000 | 0.00€ |
| Sony 337-0% | Button Batteries | SR416SW | 1/10/100/1000 | 0.00€ |
| Sony 341-0% | Button Batteries | SR714SW | 1/10/100/500 | 0.00€ |
| Sony 346-0% | Button Batteries | SR712SW | 1/10/100/500 | 0.00€ |
| Sony 348-0% | Button Batteries | SR421SW | 1/10/100/500 | 0.00€ |
| Sony 362-0% | Button Batteries | SR721SW | 1/10/100/1000 | 0.00€ |
| Sony 364-0% | Button Batteries | SR621SW | 1/10/100/1000 | 0.00€ |
| Sony 365-0% | Button Batteries | SR1116W | 1/10/100/500 | 0.00€ |
| Sony 366-0% | Button Batteries | SR1116SW | 1/10/100/500 | 0.00€ |
| Sony 370-0% | Button Batteries | SR920W | 1/10/100/1000 | 0.00€ |
| Sony 371-0% | Button Batteries | SR920SW | 1/10/100/1000 | 0.00€ |
| Sony 373-0% | Button Batteries | SR916SW | 1/10/100/1000 | 0.00€ |
| Sony 377-0% | Button Batteries | SR626SW | 1/10/100/1000 | 0.00€ |
| Sony 379-0% | Button Batteries | SR521SW | 1/10/100/1000 | 0.00€ |
| Sony 381/391-0% | Button Batteries | SR1120 | 1/10/100/500 | 0.00€ |
| Sony 384/392-0% | Button Batteries | SR41 | 1/10/100/500 | 0.00€ |
| Sony 390/389-0% | Button Batteries | SR1130 | 1/10/100/500 | 0.00€ |
| Sony 393-0% | Button Batteries | SR48W | 1/10/100/500 | 0.00€ |
| Sony 394-0% | Button Batteries | SR956SW | 1/10/100/500 | 0.00€ |
| Sony 395/399-0% | Button Batteries | SR927 | 1/10/100/500 | 0.00€ |
| Sony 396-0% | Button Batteries | SR726W | 1/10/100/1000 | 0.00€ |
| Sony 397-0% | Button Batteries | SR726SW | 1/10/100/1000 | 0.00€ |
| Sony LR1120N | Button Batteries | LR1120N B5 | 5/100/500 | 0.00€ |
| Sony LR1130N | Button Batteries | LR1130N B5 | 5/100/500 | 0.00€ |
| Sony LR41N | Button Batteries | LR41N B5 | 5/100/500 | 0.00€ |
| Sony LR43N | Button Batteries | LR43N B5 | 5/100/500 | 0.00€ |
| Sony LR44N | Button Batteries | LR44N B5 | 5/100/500 | 0.00€ |